

1. Remove the battery compartment cover by pushing in and down toward the bottom of the trimmer. To assist in removing the batteries,

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

- metal hydride) batteries.
- or rechargeable (nickel cadmium or nickel 10. Do not mix old and new batteries.
9. Do not mix old and new batteries.
- fire, or explosion.
- primary batteries as this may cause leakage, under conditions of controlled incineration.
- Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
3. Clean the battery contacts and also those of the device prior to battery installation.
2. Dephace all batteries of a set at the same time.
1. Always purchase the correct size and grade of battery most suitable for the intended use.

FOR USE

INSTRUCTIONS

- CÓMO CORTAR SU BIGOTE
1. Se le hará más fácil cortar su bigote si está limpio y ligeramente humedecido.
2. Peine su bigote en la dirección del crecimiento natural del pelo.
3. Instale la guía ajustable con 5 posiciones sobre la cuchilla normal. Empiece con la posición más larga (siempre podrá volver a acortar el bigote).

SIEMPRE CORTE SU BIGOTE DESDE ARRIBA HASTA ABAJO

 
4. Después de terminar, retire la guía y dé forma a la parte inferior de su bigote.
5. Utilice la cuchilla de acabado para diseñar y dar forma.

CÓMO CONSEGUIR UN EFECTO "BARBA DE 3 DÍAS"

Su cortadora incluye una guía para barba corta. La guía no. 1 corta el pelo cerca de la piel. La guía para barba corta cabe en la cuchilla de la misma manera que las guías para la quijada. Nota: véase la sección "Igualar la quijada".




- pull ribbon upwards.
2. Align the AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.
3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
9. Do not mix old and new batteries.
- fire, or explosion.
- primary batteries as this may cause leakage, under conditions of controlled incineration.
- Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
3. Clean the battery contacts and also those of the device prior to battery installation.
2. Dephace all batteries of a set at the same time.
1. Always purchase the correct size and grade of battery most suitable for the intended use.



3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
9. Do not mix old and new batteries.
- fire, or explosion.
- primary batteries as this may cause leakage, under conditions of controlled incineration.
- Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
3. Clean the battery contacts and also those of the device prior to battery installation.
2. Dephace all batteries of a set at the same time.
1. Always purchase the correct size and grade of battery most suitable for the intended use.



 4. Si desea un recorte aún más corto, escoja un largo de recorte más corto, como 4 mm ó 6.5 mm, y siga acortando su barba hasta conseguir el tamaño deseado.
- IGUALAR LA QUIJADA
1. Las guías para la quijada le permitirán lograr un recorte neto y preciso. Instale la guía deseada encima de la cuchilla para barba/bigote, presionando hasta que haga clic y quede firme en su lugar. La guía J1 corta el pelo a 1 mm y la guía J2 a 2 mm.
2. Sostenga la cortadora recta y corte el pelo usando pequeños movimientos uniformes.
3. Después de terminar, apague el aparato y retire el accesorio.

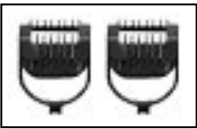

EL CONTORNEO

1. Se le hará más fácil cortar la barba si está limpia y ligeramente humedecida.
2. Peine la barba en la dirección del crecimiento natural del pelo antes de empezar a darle forma.
3. Dele forma a su barba empezando por debajo de la quijada y subiendo hacia la oreja, en cada lado del rostro. Siga dándole forma al área de la mejilla, a las patillas y a la línea de nacimiento del cabello.

CÓMO CORTAR SU BARBA

1. La cortadora cuenta con una guía ajustable con 5 posiciones, para uso con la cuchilla regular. La guía ajustable permite obtener longitudes de corte de 4 a 14 mm. Cada posición aumenta la longitud de corte de 2.5 mm.
2. Instale la guía ajustable con 5 posiciones encima de la cuchilla de corte. Le recomendamos que utilice el ajuste más largo para empezar Siempre podrá volver a acortar la barba.
3. Empiece a cortar su barba con movimientos parejos y suaves, desde las patillas hasta la quijada. Nunca corte en dirección contraria al crecimiento natural del pelo. El pelo resultaría demasiado corto.



 
TYPES OF BEARDS/MUSTACHES

- There are three key factors that will determine which beard or mustache style is best for you: 1. The shape and dimensions of your face. 2. The natural growth of your beard/ mustache. 3. The thickness of your beard/ mustache. 4. To do this, use your trimmer to trim your beard/ mustache weekly. For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trim-mer from removing more hair than desired.
- Be careful not to use too much oil and don't trimmer off and wipe away the excess oil with a soft cloth.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
9. Do not mix old and new batteries.
- fire, or explosion.
- primary batteries as this may cause leakage, under conditions of controlled incineration.
- Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
3. Clean the battery contacts and also those of the device prior to battery installation.
2. Dephace all batteries of a set at the same time.
1. Always purchase the correct size and grade of battery most suitable for the intended use.

CÓMO USAR LA CUCHILLA DE ACABADO

INSTALACIÓN/REMOCIÓN DE LA CUCHILLA SUPERIOR

- Para usar la cuchilla de acabado, puede retirar la cuchilla de corte (la cuchilla superior), según se describe a continuación (véase las figuras 1 y 2)



- Paso 1** Empuje la cuchilla hacia adelante.
- Paso 2** Alce y retire la cuchilla.

Para volver a instalar la cuchilla superior, véase las figuras 3 y 4



- Paso 3** Haga coincidir la lengüeta trasera con la abertura en la cuchilla inferior.
- Paso 4** Introduzca la lengüeta en la abertura y deslice la cuchilla hacia adelante hasta que haga clic y quede firme en su lugar.

5-POSITION COMB	J2	J1	1mm trim	2mm trim	4mm, 6.5mm, 9mm, 11.5mm & 14mm trims
S1					Close stubble lock

- The table below explains the trim length for each comb. You should start out with a longer trim-length comb and work your way down to the desired trim length.
- COMB GUIDES**
1. The trimmer includes a five-position comb for use with the hair trimming blade (4–14mm). Each position increases the length by 2.5mm.
2. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)
3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)

GETTING STARTED:


- The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, mustache, neckline and even close-cut stubble. While both blades are used for trimming, the upper blade can easily be removed, leaving the bottom blade for detailing thin lines and edging.
1. The shape and dimensions of your face. 2. The natural growth of your beard/ mustache. 3. The thickness of your beard/ mustache. 4. To do this, use your trimmer to trim your beard/ mustache weekly. For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trim-mer from removing more hair than desired.
- Be careful not to use too much oil and don't trimmer off and wipe away the excess oil with a soft cloth.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
9. Do not mix old and new batteries.
- fire, or explosion.
- primary batteries as this may cause leakage, under conditions of controlled incineration.
- Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
3. Clean the battery contacts and also those of the device prior to battery installation.
2. Dephace all batteries of a set at the same time.
1. Always purchase the correct size and grade of battery most suitable for the intended use.



GUÍAS

La tabla a continuación indica la longitud de corte que cada guía permite obtener. Empiece con un ajuste largo y luego vuelva a acortar la barba con un ajuste más corto hasta encontrar el ajuste perfecto.

S1	Barba de 3 días
J1	1 mm
J2	2 mm
GUÍA AJUSTABLE CON 5 POSICIONES	4 mm, 6.5 mm, 9 mm, 11.5 mm & 14 mm

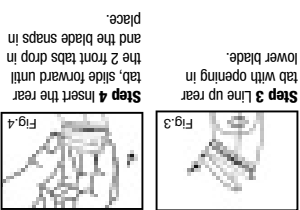 

- HOW TO USE THE SINGLE DETAILING TRIMMING BLADE**
- UPPER BLADE REMOVAL AND ATTACHMENT
- Fig. 1 and Fig. 2.
1. The trimmer's upper blade can be removed to use the single detailing blade as shown in Fig. 1 and Fig. 2.
2. The natural growth of your beard/ mustache. 3. The thickness of your beard/ mustache. 4. To do this, use your trimmer to trim your beard/ mustache weekly. For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trim-mer from removing more hair than desired.
- Be careful not to use too much oil and don't trimmer off and wipe away the excess oil with a soft cloth.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
9. Do not mix old and new batteries.
- fire, or explosion.
- primary batteries as this may cause leakage, under conditions of controlled incineration.
- Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.
6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
4. To use as your trimmer, push ON/OFF switch up wards to ON position.
3. Clean the battery contacts and also those of the device prior to battery installation.
2. Dephace all batteries of a set at the same time.
1. Always purchase the correct size and grade of battery most suitable for the intended use.

- cuchillas con dos cuchillas independientes. La cuchilla superior es una cuchilla de corte regular. La cuchilla inferior es una cuchilla de acabado que permite cortar el pelo de más cerca, reduciendo la cantidad de pasadas.
- BARBAS Y BIGOTES**
- El tipo de barba o de bigote que más conviene a una persona depende de:
1. La forma y el tamaño de su rostro.
2. La forma del crecimiento natural de su barba o de su bigote.
3. El espesor de su barba o de su bigote. Si no está seguro del tipo de barba o bigote que le conviene, pida consejo a un barbero. Después de dar forma a su barba o a su bigote, deberá mantener su aspecto, usando la cortadora una vez por semana. Para lograr resultados óptimos, humedadza ligeramente su barba antes de recortarla (no la moje). Esto evitará cortar demasiado pelo.

TIPOS DE BARBAS Y BIGOTES



- *Requiere 3 pilas AAA (no incluidas). Le aconsejamos que utilice pilas alcalinas, las cuales son más duraderas.

MANTENIMIENTO DE SU CORTADORA

- LUBRICACIÓN**
- Lubrique las cuchillas aproximadamente una vez al mes. Para no ensuciar, haga esto encima de un periódico. Sostenga el aparato al revés y enciéndalo. Coloque una gota de aceite sobre las cuchillas, espere por unos segundos, y luego apague el aparato y limpie el exceso de aceite con un paño suave.
- No use demasiado aceite y no lubrique el aparato más de lo necesario. Esto podría dañar el motor. Tampoco intente lubricar las piezas del motor, las cuales están lubricadas de por vida. Mantenga el aceite fuera del alcance de los niños.

LIMPIEZA DE LAS CUCHILLAS

Las cuchillas de su aparato fueron diseñadas con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza provisto. Tenga cuidado cuando sea necesario cambiar o ajustar las cuchillas. Asegúrese de que ambas cuchillas siempre se cambien o afilen al mismo tiempo. Para disfrutar de su aparato durante mucho tiempo, utilícelo únicamente con el propósito para el cual fue diseñado: cortar la barba y el bigote.

JUEGO DE CUCHILLAS CON DOS CUCHILLAS INDEPENDIENTES

Su nueva cortadora cuenta con un juego de

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

4. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

9. Do not mix old and new batteries.

fire, or explosion.

primary batteries as this may cause leakage, under conditions of controlled incineration.

Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

4. To use as your trimmer, push ON/OFF switch up wards to ON position.

3. Clean the battery contacts and also those of the device prior to battery installation.

2. Dephace all batteries of a set at the same time.

1. Always purchase the correct size and grade of battery most suitable for the intended use.

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

4. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

9. Do not mix old and new batteries.

fire, or explosion.

primary batteries as this may cause leakage, under conditions of controlled incineration.

Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

4. To use as your trimmer, push ON/OFF switch up wards to ON position.

3. Clean the battery contacts and also those of the device prior to battery installation.

 
2. Dephace all batteries of a set at the same time.

1. Always purchase the correct size and grade of battery most suitable for the intended use.

- de la(s) pila(s) hacia abajo para abrirlo. Para retirar las pilas con más facilidad, jale la cinta hacia arriba.
2. Instale las pilas AAA, respetando los signos de polaridad. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.



3. Cierre la cubierta del compartimiento de la(s) pila(s), empujando hasta que haga clic.
4. Para encender el aparato, deslice el interruptor hacia arriba (ON).
5. Para apagar el aparato, deslice el interruptor hacia abajo (OFF).
6. Su cortadora está equipada con un cabezal removible. Para retirar el cabezal, asegúrese de que el interruptor esté en la posición "OFF". Gire el cabezal en sentido antihorario hasta que la marca "I" esté frente a la flecha y jale el cabezal hacia arriba. Para volver a instalar el cabezal, haga coincidir la marca "I" con la flecha. Para sujetar el cabezal, gíreolo en sentido horario hasta que la marca "I" coincida con el círculo.

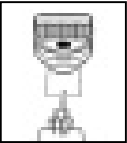

INSTRUCCIONES DE USO

1. No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este aparato.
2. Cambie todas las pilas al mismo tiempo.
3. Limpie los contactos del aparato y los de la(s) pila(s) antes de instalarlas.
4. Siempre respete los signos de polaridad (+/-) al instalar la(s) pila(s).
5. Retire la(s) pila(s) si no va a usar el aparato durante un largo período de tiempo.
6. Retire las pilas usadas sin demora.
7. Guarde las pilas nuevas en su paquete original, lejos de los objetos de metal, los cuales podrían provocar un cortocircuito. Nunca cortocircuite las pilas.
8. Nunca tire las pilas al fuego, excepto mediante incineración controlada. Esto podría causar una explosión. Nunca intente cargar una pila no recargable. Esto podría presentar un riesgo de pérdida de electrolito, incendio o explosión.
9. No junte pilas nuevas con pilas usadas.
10. No junte pilas alcalinas con pilas regulares (carbono-zinc) o pilas recargables (NiCd o NiMH).

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

1. Deslice la cubierta del compartimiento



4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache. 5. Use the single detailing blade for fine detail trimming and edging.
- HOW TO GET THE STUBBLE LOOK**
- This trimmer includes 1 stubble comb. Comb #1 is close to the skin. The stubble comb fits on the blade just like the jawline combs (note how combs/jawline combs go on).

FROM THE TOP DOWN

ALWAYS TRIM YOUR MUSTACHE

1. The two jawline attachments will help you to position. It is a good idea to start with the ion-blead and snap it into attachment to a shorter setting (such as 4mm or 5.5mm) and the 5-position comb. 2. Comb through your mustache in the direction of growth. 3. Place the 5-position comb over the facial hair and begin trimming under your beard and snap it down. 4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache. 5. Use the single detailing blade for fine detail trimming and edging.

TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.
2. Comb through your mustache in the direction of growth.
3. Place the 5-position comb over the facial hair and begin trimming under your beard and snap it down. 4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache. 5. Use the single detailing blade for fine detail trimming and edging.

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

1. Deslice la cubierta del compartimiento

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

4. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

9. Do not mix old and new batteries.

fire, or explosion.

primary batteries as this may cause leakage, under conditions of controlled incineration.

Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

4. To use as your trimmer, push ON/OFF switch up wards to ON position.

3. Clean the battery contacts and also those of the device prior to battery installation.

2. Dephace all batteries of a set at the same time.

1. Always purchase the correct size and grade of battery most suitable for the intended use.

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

4. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

9. Do not mix old and new batteries.

fire, or explosion.

primary batteries as this may cause leakage, under conditions of controlled incineration.

Failure to observe this precaution may result in an explosion. Never attempt to recharge short-circuit them. Never short-circuit batteries.

8. Never dispose of batteries in fire, except packaging, away from metal objects that could short-circuit them.

6. Remove unused batteries in their original packaging, away from metal objects that could short-circuit them.

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

4. To use as your trimmer, push ON/OFF switch up wards to ON position.

3. Clean the battery contacts and also those of the device prior to battery installation.

2. Dephace all batteries of a set at the same time.

1. Always purchase the correct size and grade of battery most suitable for the intended use.

 
Manual de instrucciones
Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

CORTADORA DE BARBA/BIGOTE MULTIUSO



ON/OFF SWITCH
To operate, simply slide switch toward blade; to stop push slide away from blade.

REPLACEMENT (REMOVAL) OF BLADE SET
Before storing your trimmer, use a cleaning brush to whisk away any loose hair from the unit and the blades. You should remove the blade set after a few uses to clean between the blades. To remove entire blade set from your trimmer, place thumb on the removal procedure, only this time place your thumb on the large cutter and snap into place.

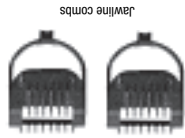

MODEL GMT155
BEARD & MUSTACHE TRIMMER

FORMULARIO DE PEDIDO – PIEZAS DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 31 de diciembre de 2015. Aceptaremos los pedidos enviados después de esta fecha y le informaremos de cualquier cambio de precio.

DESCRIPCIÓN	MODELO	PRECIO	CANTIDAD	TOTAL
Juego de cuchillas	BLD-144	\$7.00		
3 tubos de aceite lubricante	HC-OIL	\$2.00		
3 pinzas	CLP-1	\$1.50		

Subtotal	
*Impuesto a la venta	
TOTAL	

Favor de incluir un cheque o giro postal al nombre de Conair. Sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de \$10.00; de lo contrario se sumará \$2.00 al pedido por gastos administrativos.

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Los precios incluyen gastos de manejo y envío. Los precios están sujetos a cambio sin previo aviso. Precios válidos únicamente para envíos en la parte continental de los EE.UU. La entrega demora entre 4 y 6 semanas.

Para evitar demoras, por favor escriba claramente.
Favor de incluir su dirección completa; UPS no puede hacer entregas a casillas postales.

NOMBRE _____
DIRECCIÓN _____
CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____
TELÉFONO () _____ (en caso de pregunta)
Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at
www.conair.com/registration
Patent Pending
©2013 Conair Corporation
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Para registrar su producto, visitenos en:
www.conair.com/registration

Patente en trámite
©2013 Conair Corporation
Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que

TRIMMER REPLACEMENT PARTS & ACCESSORIES ORDER FORM

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Replacement Blade Set	BLD-144	\$7.00		
Lubricating Oil (pkg. of 3 tubes)	HC-OIL	\$2.00		
Styling Clips (set of 3)	CLP-1	\$1.50		

Subtotal	
*Sales Tax	
TOTAL	

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Enclose check or money order made payable to Conair. (We cannot accept cash). Stamps without notice. Prices are valid only for shipments within the continental United States. All prices include handling and return postage. Prices are subject to change. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.

To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____
ADDRESS _____
CITY _____ STATE _____ ZIP _____
TELEPHONE () _____
(We call only if we have a question about your order.)

For information on other Conair haircut kit parts call: 1-800-3-CONAIR.

TWIN X TRIM

ALL-IN-ONE
BEARD & MUSTACHE
TRIMMER



For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

Instruction Booklet

FOR MEN®
CONAIR

Model GMT155

BOTÓN DE ENCENDIDO/APAGADO

Para encender el aparato, deslice el botón de encendido/apagado hacia las cuchillas. Para apagarlo, deslícelo hacia atrás.

MANTENIMIENTO DE SU CORTADORA

CAMBIO DEL JUEGO DE CUCHILLAS



Limpie las cuchillas después de cada uso con un cepillo de limpieza. Retire el juego de cuchillas y limpie el espacio entre las cuchillas cada 2–3 usos. Para retirar el juego de cuchillas, asegúrese de que el aparato esté apagado. Sostenga el aparato con el botón de encendido/apagado frente su cuerpo y empuje la cuchilla pequeña con el pulgar para desenscajar el juego de cuchillas. Para instalar el juego de cuchillas, instáelo sobre el cabezal y presione la cuchilla grande para sujetarlo.



Cortadora multiuso

MODELO GMT155
CORTADORA DE BARBA/BIGOTE

Juego de cuchillas con dos cuchillas independientes



Guía para barba de 3 días



Guías para la quijada



Guía ajustable con 5 posiciones



Cuchilla de corte (cuchilla superior)



Cuchilla de acabado

El sistema de cuchillas independientes permite cortar la barba y el bigote cuidadosa, rápida y uniformemente, así como conseguir efectos "barba de 3 días" variados y dar el acabado en todas las zonas que lo requieren incluso la nuca y la barbilla. La cuchilla inferior es ideal para dar el acabado.

CUT HERE